

Note: There are no Dip Switches or Jumpers on the Video Board.

If the monochrome display adapter is the only display adapter that is to be used in your computer; or if you have more than one adapter and the monochrome adapter is the primary adapter then set S1 switches 5 and 6 to the OFF position.

Main Logic Board

