

After you prepare the drive, follow your computer hardware user's guide to install the drive in your computer. Then, connect the data interface cable and power cables as shown below. Note that the data interface cable is keyed and plugs in only one way. Do not force it.

**CAUTION:** Do not connect the drive to a computer that supplies power through the data interface cable. Doing so could damage your computer.

The following table lists Tandy computers that are compatible with this drive. If your computer is not listed, refer to its owner's manual. If the manual refers to a separate four-pin power cable for floppy drive power, the computer is probably compatible.

MODEL NAME	RADIO SHACK CAT. NO.
Tandy 2100	250-1624
Tandy 3100	250-1640
Tandy Sensation II	250-1651
Tandy 4000	250-5000
Tandy 4820 SX/T	250-5140
Tandy 4833 LX/T	250-5145
Tandy OMNI Profile I	259-5146 thru 5150
Tandy OMNI Profile II	259-7706 thru 7717

(TLC/jlc-05/27/94)