

INSTALLING THE REMOTE CONTROL'S BATTERY

The remote control requires two AA batteries (not included) for operation. We recommend alkaline batteries such as Radio Shack's Cat. No. 23-552.

Install the batteries as shown below:

1. Remove the battery compartment cover by pressing the cover in the direction of the arrow.
2. Place two fresh AA batteries in the compartment, observing the polarity symbols (+ and -) marked in the compartment.
3. Replace the compartment cover.

NOTE: If the remote control does not work or operates erratically, replace both batteries.

CAUTION: Use only fresh batteries of the recommended size and type. Always remove old or weak batteries. They can leak chemicals that can damage electronic circuits.

USING THE REMOTE CONTROL

Most of the remote control's buttons are duplicated on the VCR's front panel. You can use these buttons to perform identical procedures either at the VCR or by remote control. The following special-function buttons appear only on the remote control.

Number Buttons - allow direct selection of any channel within the tuner's range. You can also use these buttons to set the clock or enter timer information.

OUTPUT SELECT Button - press to select the sound you hear during recording and playback.

To use the remote control, point it at the VCR and press the desired button(s).

SETTING THE CLOCK

Set the clock accurately for proper automatic timer recording. We suggest that you use a TV or radio station as your source. In the following example, the clock is set to 5:40 pm, Thursday, May 21st, 1992.

1. Press POWER to turn on the VCR.
2. Turn on your TV and set it to the same channel as the VCR's 3CH/4CH switch located on the back of the VCR. Then press TV/VCR on the Model 800 so that VCR appears on the display.

If you use a TV monitor, be sure to set it to the video mode.

3. Press MENU. The menu display appears on the screen.

| |
|------|
| MENU |
|------|

| | |
|----|-------------------|
| *1 | PROGRAM SET |
| 2 | TIME SEARCH |
| 3 | CLOCK SET |
| 4 | CHANNEL PRESET |
| 5 | CHANNEL ADD/CLEAR |
| 6 | SAP ON/OFF |

4. Press 3 on the remote control or press CHANNEL \ / so the arrow mark is next to the 3. Press SELECT to enter the clock-setting mode. The month digits flash.

| | |
|------|-------------------|
| MENU | |
| 1 | PROGRAM SET |
| 2 | TIME SEARCH |
| *3 | CLOCK SET |
| 4 | CHANNEL PRESET |
| 5 | CHANNEL ADD/CLEAR |
| 6 | SAP ON/OFF |

5. Enter the correct month using the remote control's number buttons or CHANNEL / \ or \ /. Then press SELECT. Use the same procedure to set the date. (Press 05 SELECT, 21 SELECT and 1992 SELECT to set May 21st, 1992.)

| | | | |
|-------------|--------|-------|------|
| -CLOCK SET- | | | |
| MONTH | DAY | YEAR | |
| 05 | 21 | THU | 1992 |
| HOUR | MINUTE | AM/PM | |
| 12 | : 00 | AM | |

Precede a single-digit entry with 0. If you enter a wrong number, select information again and re-enter.

NOTE: It is not necessary to enter the day of the week if the year is correct.

6. Enter the correct hour with the number buttons or CHANNEL / \ or \ / and press SELECT. Enter the minutes and press SELECT. (Press 05 SELECT and 40 SELECT to set 5:40.)

| | | | |
|-------------|--------|-------|------|
| -CLOCK SET- | | | |
| MONTH | DAY | YEAR | |
| 05 | 21 | THU | 1992 |
| HOUR | MINUTE | AM/PM | |
| 05 | : 40 | AM | |

Press SELECT.

7. Press CHANNEL / \ or \ / to toggle between am and pm. Your VCR uses an am/pm clock.

| | | | |
|-------------|--------|-------|------|
| -CLOCK SET- | | | |
| MONTH | DAY | YEAR | |
| 05 | 21 | THU | 1992 |
| HOUR | MINUTE | AM/PM | |
| 05 | : 40 | PM | |

8. Review the displayed information.

If the information is correct, press MENU. The display returns to normal and the VCR display changes to the correct clock setting.

If the information is not correct, press SELECT as many times as necessary and enter the correct information. Press MENU to store the information.

NOTES: Seconds begin counting at 00 when you press MENU after you set am or pm.

The VCR has built-in calendar for up to the year 2006.

If the display shows an abnormal reading or no reading, press ALL CLEAR. Then repeat Steps 1 through 8 to reset the clock.

Memory Sentinel

Your VCR has a special memory sentinel feature that protects clock settings, tuner programming information, and timer memory settings by providing up to 1 hour backup power in case a power failure occurs or the power cord accidentally becomes unplugged. After about 1 hour of no power, the VCR loses all memory settings.

(ALL-12/13/94)