

Use the remote control to set the clock. Set the clock accurately for proper Automatic-Timer and One-Touch recording.

Note: The following instructions refer to the TV's on-screen display indicators. Some of the indicators on the VCR's display vary slightly.

Turn on the system; then, follow these steps to set the time and date.

1. Press PROG on the remote control. The program menu appears.

```

***MENU***

1 CLOCK SET
2 TIMER PROGRAM
3 PROGRAM REVIEW
4 VCR SETUP

TO SELECT PUSH 1-4
TO END PUSH PROGRAM

```

2. Press 1 on the remote control to select the clock setting mode. The first hour digit flashes.

```

CLOCK SET

TIME --:--

MONTH/DAY/YEAR
DATE --/--/--

TO END PUSH PROGRAM

```

3. Press the remote control's number buttons to set the correct hour and minute (for example, press [0][9][3][0] to set 9:30).

Note: Precede a single-digit entry with [0]. If you press a wrong button, press [CLEAR] and then press the correct button.

```

CLOCK SET

TIME 09:30
AM=1 PM=2
MONTH/DAY/YEAR
DATE --/--/--

TO END PUSH PROGRAM

```

4. Press 1 to select AM or 2 to select PM. Your VCR uses only the

standard AM/PM format.

```
CLOCK SET

TIME 09:30 PM

MONTH/DAY/YEAR
DATE --/--/--

TO END PUSH PROGRAM
```

5. Press the number buttons to set the correct date. (For example, press [0][3][0][4][9][3] to set March 4, 1993.) The day of the week is automatically set.

```
CLOCK SET

TIME 09:30 PM

MONTH/DAY/YEAR
DATE 03/04/93
THU

TO END PUSH PROGRAM
```

6. Check the information.

If the information is correct, press [PROG] to store it. The program menu reappears on the TV screen and the VCR's display shows the clock.

If the information is not correct, press [CLEAR] as necessary to erase the wrong information. Then enter the correct information and press [PROG] to store it. The program menu reappears on the TV screen, and the VCR's display shows the clock.

Note: If you press [CLEAR] once, you erase the digit at the cursor location. If you press [CLEAR] again, the cursor returns to the previously set digit.

```
***MENU***

1 CLOCK SET
2 TIMER PROGRAM
3 PROGRAM REVIEW
4 VCR SETUP

TO SELECT PUSH 1-4
TO END PUSH PROGRAM
```

7. Press [PROG] to clear the menu from the screen.

Notes: If you enter an invalid date or time (13:00, for example), ? flashes on the screen. Enter the correct date or time.

If you do not enter anything for over 50 seconds, the display returns to the normal display.

If the display shows an abnormal reading or no reading, unplug the power cord for about 3 seconds. Then plug it back in.

(/all-12/13/94)