

Initially Programming the Automatic Tuner

1. Press [PROG] on the remote control. The program menu appears on the TV screen.

```
***MENU***  
  
1 CLOCK SET  
2 TIMER PROGRAM  
3 PROGRAM REVIEW  
4 VCR SETUP  
  
TO SELECT PUSH 1-4  
TO END PUSH PROGRAM
```

2. Press 4 to select VCR SET UP. The setup menu appears on the TV screen.

```
VCR SET UP  
  
1 NORMAL/CATV (NORMAL)  
2 AUTO PROGRAM  
3 ADD/ERASE CHANNEL  
4 T120/160 (120)  
5 ENGLISH/ESPANOL  
  
TO SELECT PUSH 1-5  
TO END PUSH PROGRAM
```

3. Press 1 to select normal(antenna) or cable (CATV) bands. Normal or CATV is highlighted on the TV screen.

```
VCR SET UP  
  
1 NORMAL/CATV (CATV)  
2 AUTO PROGRAM  
3 ADD/ERASE CHANNEL  
4 T120/160 (120)  
5 ENGLISH/ESPANOL  
  
TO SELECT PUSH 1-5  
TO END PUSH PROGRAM
```

4. Press [2] to enter the auto program mode. The tuner scans through the channels in the selected band and memorizes all the active channels in your area.

AUTO PROGRAMMING

CH 06

5. After scanning all the channels, the tuner automatically exits the setup and program modes and stops on the lowest-numbered active channel.

#### Adding or Erasing Channels

Turn on the system; then, follow these steps to delete from memory any channels you no longer receive or seldom watch, or to add any channels missed when you programmed the tuner's memory.

1. Follow Steps 1 and 2 in "Initially Programming the Automatic Tuner."
2. Press 3 to select the add/erase channel mode. CH appears on the TV screen.
3. Enter the desired channel number using the remote control's number buttons, or use tuning on the remote control or the VCR's control panel.
4. Press [PLAY] to add the channel or press [STOP] to erase the channel.
5. Repeat Steps 3 and 4 to add or erase other channels.
6. Press [PROG] once to exit the add/erase channel mode, and a second time to exit the program menu.

Note: The tuner memory is common to both normal and cable TV bands. If you store Channel 45 in the normal TV band, the tuner stops on Channel 45 in the cable TV band also, even if there is no active channel there.

(/all-12/13/94)