

If you have followed the instructions in this manual and still have problems operating the VCP, find the problem in the PROBLEM column. Then check the POSSIBLE CAUSE and REMEDY columns to correct the problem.

| PROBLEM  | POSSIBLE CAUSE   | REMEDY   |
|--|--|--|
| No power.  | Power cord in not connected.<br><br>Power indicator is off.                                | Plug the AC power cord into an AC outlet or connect the DC power cord to your vehicle's cigarette-lighter socket.<br><br>Press in POWER so the POWER indicator lights. |
| Picture is poor on playback.   | The TV is not set to the proper channel.<br><br>The TV's fine tuning is not set correctly. | Set the TV channel selector to the same channel as the VCP's CHANNEL switch.<br><br>Fine-tune your TV.   |
| Noise in picture   | Video head is dirty.   | Have a trained technician clean the head.  |
| No picture on playback.  | The TV is not set to the proper channel.   | Set the TV to the same channel as the VCP's CHANNEL switch.  |
| Interference in the playback picture.  | The VCP is not tracking properly.  | Adjust the TRACKING control.   |
| Operation buttons do not work when the power is on and a cassette is inserted. | Dew protection system is active.   | Wait until the DEW indicator is off then proceed with operation.   |
| Broadcast TV programs cannot be seen.  | Connections are not correct.   | Recheck connections.   |