

**GMB-486UN  
80486 Mainboard  
User's Guide**

Version 3.00

---

## ABOUT THIS GUIDE

This guide contains instructions for configuring and installing the GMB-486UN mainboard.

- Chapter 1, **Introduction**, acquaints user with the special features of the GMB-486UN mainboard.
- Chapter 2, **Hardware Configuration**, gives information on configuring memory and setting the mainboard's jumpers. Brief sections on installing memory are also included.
- Chapter 3, **Mainboard Installation**, is an overview of how to install the mainboard in a system.
- Chapter 4, **BIOS Setup**, provides the BIOS information for system configuration.
- Chapter 5, **Hard Disk Types**, provides a Default fixed Disk table.
- Chapter 6, **Error Codes**, provides references for all POST communicate errors.

## TRADEMARKS USED IN THIS MANUAL

MS-DOS, XENIX, Microsoft, WINDOWS are trademarks of Microsoft Corp.

NOVELL, Netware are trademarks of Novell, Inc.

Wordstar is a trademark of MicroPro International.

Lotus 1-2-3 is a trademark of Lotus Development Corp.

AT is a trademark of International Business Machines Corp.

OS/2 is a trademark of Microsoft Corp. and International Business Machines Corp.

UNIX is the trademark of AT&T.

Weitek is a trademark of Weitek Corp.

The information presented in this publication has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies, whereas, specification is subjected to change without notice.

All rights reserved. No part of this Manual may be reproduced in any form without the written permission.

---

## UNPACKING THE MAINBOARD

The GMB-486UN Mainboard comes packed in a sturdy cardboard shipping carton. The carton contains:

- The GMB-486UN Mainboard
- This User's Guide

*Note: Do not remove the mainboard from its original packing until ready to install.*

The GMB-486UN mainboard is easily damaged by static electricity. Observe the following precautions while unpacking and installing the mainboard.

1. Touch an unpainted area of the system chassis before handling the mainboard or any component. Doing so, discharges the static charge user's body may have built.
2. Remove the mainboard from its anti-static wrapping and place it on a grounded surface, component side up.
3. Inspect the mainboard for damage. Shipping may have loosened integrated circuits from their sockets. If any integrated circuit appears loose, press carefully to seat it firmly in this socket.

Do not apply power if the mainboard appears damaged. If there is damage to the board, or items are missing, contact dealer immediately.

---

# CONTENTS

<b>CHAPTER 1</b>	<b>INTRODUCTION</b>	<b>1</b>
1.1	KEY FEATURES	1
1.2	MAINBOARD COMPONENTS	2
<b>CHAPTER 2</b>	<b>HARDWARE CONFIGURATION</b>	<b>3</b>
2.1	JUMPER AND MEMORY BANK LOCATIONS	3
2.2	JP3, JP7, JP9, JP13 - CPU JUMPER SETTING	4
2.3	CACHE CONFIGURATION	4
2.3.1	UPGRADING CACHE	5
2.3.2	CACHE SIZE AND MEMORY LOCATIONS	5
2.3.3	CACHE CHIP SOCKETS AND JUMPER LOCATIONS	6
2.3.4	JP22, JP23, JP25-30 - CACHE JUMPER SETTING	6
2.3.5	INSTALLING CACHE CHIPS	7
2.4	JP12-DISPLAY ADAPTER SETUP	8
2.5	JP2-DISCHARGE CMOS SETUP	9
2.6	JP10-SOURCE OF GA20	9
2.7	MEMORY INSTALLATION	10
2.7.1	INSTALLING SIMM	11
<b>CHAPTER 3</b>	<b>MAINBOARD INSTALLATION</b>	<b>13</b>
3.1	COMPONENTS	13
3.2	INSTALLING THE MAINBOARD	14
3.3	CONNECTION THE MAINBOARD	14
3.4	CONNECTION LOCATIONS	15
3.5	CONNECTORS	15
3.5.1	J2/J3-POWER SUPPLY CONNECTOR	15
3.5.2	JP18-KEYLOCK & POWER LED CONNECTOR	16
3.5.3	JP15-TURBO SWITCH CONNECTOR	16
3.5.4	JP16-TURBO LED CONNECTOR	16
3.5.5	JP17-SPEAKER CONNECTOR	17
3.5.6	JP14-RESET SWITCH CONNECTOR	17

---

	3.5.7	JP1-EXTERNAL BATTERY	17
	3.5.8	J1-KEYBOARD CONNECTOR	18
3.6		SYSTEM ASSEMBLY OVERVIEW	18
<b>CHAPTER 4</b>		<b>AMI BIOS SETUP</b>	<b>19</b>
4.1		STANDARD CMOS SETUP	19
4.2		ADVANCED CMOS SETUP	21
4.3		ADVANCED CHIPSET SETUP	22
4.4		AUTO CONFIGURATION WITH BIOS DEFAULTS	26
4.5		AUTO CONFIGURATION WITH POWER-ON DEFAULTS	26
4.6		CHANGE PASSWORD	27
4.7		HARD DISK UTILITY	27
<b>CHAPTER 5</b>		<b>HARD DISK TYPES</b>	<b>29</b>
<b>CHAPTER 6</b>		<b>ERROR CODES</b>	<b>31</b>
6.1		BEEP ERROR CODES	31
6.2		ERROR MESSAGES	32
6.3		HARD DISK UTILITY ERROR MESSAGES	33

---

# CHAPTER 1 INTRODUCTION

The GMB-486UN mainboard is a 2/3 body AT size high-performance mainboard that provides with the basic elements on which to build an advanced computer. This mainboard is fully IBM AT compatible, but has the added enhancement of a powerful 32-bit microprocessor.

The GMB-486UN mainboard is configured with one of five microprocessors:

- 80486SX-25 CPU running at 25MHz.
- 80486DX-33 CPU running at 33MHz.
- 80486DX-50 CPU running at 50MHz.
- 80486DX2-50 CPU running at 25MHz.
- 80486DX2-66 CPU running at 33MHz.

## 1.1 KEY FEATURES


The advanced features of the GMB-486UN mainboard include:

- 100% IBM PC-AT compatible 2/3 Baby AT size single chip 486 solution.
- Support 80486SX 25MHz, 80486DX 33MHz/50MHz or 80486DX2 25MHz/33MHz microprocessor with 32-bit access to data.
- High performance single chip core logic with Internal Cache Controller.
- Built-in direct mapped secondary cache controller with option write-back or write-through operation and 0 wait state for cache hit.
- Optional cache memory size of 32/64/128/256KB in either one or two banks of SRAM.
- Two non-cacheable blocks ranging from 128K to 1MB.
- Optional caching of shadowed video BIOS.
- Memory configurations from 1MB to 32MB are possible using combinations of 256Kx9, 1Mx9 and 4Mx9 SIMM modules.
- Turbo DRAM mode for 80486 2-1-1-1 or 3-1-1-1 burst move-in for the systems without secondary cache.
- Concurrent 80486 cache read miss burst move-in and secondary cache update.
- Hidden DRAM refresh.
- Support KB control Turbo/Deturbo mode select.
- Support 7 Direct Memory Access channels.
- Support 16 Interrupt levels.
- Six 16-bit I/O slots, two 8-bit I/O slots.

- Battery-backed CMOS memory for real time clock and system Configuration.
- User Defined Password to inhibit illegal access.

## 1.2 MAINBOARD COMPONENTS

This section gives a brief description of key components on the mainboard. Refer to Fig 1 for component locations.

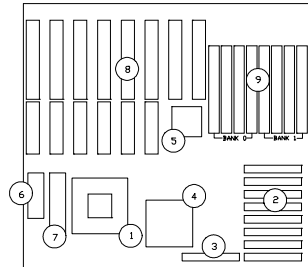

**Fig 1 Key Components of the GMB-486UN Mainboard**

- |   |                          |
|---|--------------------------|
| (1). System Microprocessor                            | (6). System BIOS         |
| (2). Cache Memory                                     | (7). Keyboard Controller |
| (3). Cache Tag Memory                                 | (8). Expansion Slots     |
| (4). Single Chip Core Logic                           | (9). Main Memory         |
| (5). UM82C206 Integrated Peripherals Controller (IPC) |                          |

---

## CHAPTER 2      **HARDWARE**


# CONFIGURATION

This chapter describes how to set the mainboard jumpers for cache memory and display type, and how to install memory modules.

Before beginning the configuration, user should take the following precautions:

- Turn off the power supply, and unplug the power cord before begin.
- Unplug all cables that connect the mainboard to any external devices.

### 2.1 JUMPER AND MEMORY BANK LOCATIONS

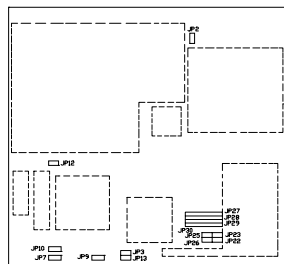

**Fig 2 Jumper and Memory Bank Locations**



## 2.2 JP3, JP7, JP9, JP13 - CPU JUMPER SETTING

The GMB-486UN mainboard can support 80486SX, 80486DX and 80486DX2 processor at different speed. Jumpers JP3, JP7, JP9 and JP13 are required to setup for installing various CPU. Refer to Fig 2 for the location of JP3, JP7, JP9 and JP13. Set the jumpers according to the following table:

CPU	JP3	JP7	JP9	JP13
486SX-25				
486DX-33				
486DX-50				
486DX2-50				
486DX2-66				

**Table 1: CPU Jumper Setting**

For 486DX2-50 CPU, 25MHz oscillator is used instead.

For 486DX2-66 CPU, 33MHz oscillator is used instead.

## 2.3 CACHE CONFIGURATION

The special feature of the GMB-486UN mainboard is a built-in direct-mapped cache controller with optional write-back or write-through operation which supports 32KB, 64KB, 128KB, or 256KB cache memory.

The GMB-486UN mainboard has a built-in cache controller. It requires external SRAM as tag and cache memory. The caching Scheme is direct mapping with selected write-back/write-through operation. The mainboard allows 32KB, 64KB, 128KB, and 256KB cache configuration. Memory size is selected by the hardware jumpers and the BIOS setup program.

### 2.3.1 UPGRADING CACHE

The GMB-486UN mainboard is available with an optional 32KB, 64KB, 128KB, or 256KB cache memory on-board. User can upgrade cache memory by installing additional SRAM (Static Random Access Memory) chips in sockets U36-U39 and U42-U45.

The speed of the SRAM chips needed depends on the clock speed of the microprocessor:

**50MHz** CPU requires **20ns (tag)** and **20ns (data)** SRAM chips for SRAM interleaved.

**50MHz** CPU requires **20ns (tag)** and **25ns (data)** SRAM chips for SRAM not interleaved.

**33MHz** CPU requires **25ns (tag)** and **25ns (data)** SRAM chips.

**25MHz** CPU requires **35ns (tag)** and **35ns (data)** SRAM chips.

### 2.3.2 CACHE SIZE AND MEMORY LOCATIONS

The table below describes the chip capacity and socket location required for each cache size configuration. User can use 8K x 8-bit or 32K x 8-bit SRAM chips in banks 0 and 1, and in the Tag RAM sockets. Please note that, do not combine different chip capacities in banks 0 and 1.

Cache Size	BANK 0				BANK 1				TAG RAM
	U36	U37	U38	U39	U42	U43	U44	U45	U34
<b>32K</b>	8Kx8	8Kx8	8Kx8	8Kx8	NONE	NONE	NONE	NONE	8Kx8
<b>64K</b>	8Kx8	8Kx8	8Kx8	8Kx8	8Kx8	8Kx8	8Kx8	8Kx8	8Kx8
<b>128K</b>	32Kx8	32Kx8	32Kx8	32Kx8	NONE	NONE	NONE	NONE	8Kx8
<b>256K</b>	32Kx8	32Kx8	32Kx8	32Kx8	32Kx8	32Kx8	32Kx8	32Kx8	32Kx8

**Table 2: Cache Size Configuration**

### 2.3.3 CACHE CHIP SOCKETS AND JUMPER LOCATIONS

 


 











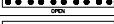
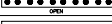
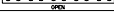
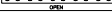
Fig 3 Cache Jumper and Socket Locations

### 2.3.4 JP22, JP23, JP25-30 - CACHE JUMPER SETTING

Cache memory is configured using jumpers, JP22, JP23, and JP25 - JP30.  
**JP22, JP23, and JP25 - JP30 -- Cache Size Setup**

## Hardware Configuration

7

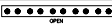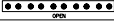Jumpers	32KB	64KB
JP22		
JP23		
JP25		
JP26		
JP27		
JP28		
JP29		
JP30		

Jumpers	128K	256K
JP22		
JP23		
JP25		
JP26		
JP27		
JP28		
JP29		
JP30		

**Table 3: Cache Jumper Setting**


### 2.3.5 INSTALLING CACHE CHIPS

Install cache chips on the mainboard as follows:

**Caution:** *Static electricity can damage a cache chip.*

1. Review the section on static electricity precautions at the beginning of this manual, and make sure that power to the mainboard is off.
2. Align the chip so that the notched corner of the chip matches the notched corner of the socket.
3. Align the pins with the socket holes.

4. Carefully press the chip into the socket.

 

**Fig 4 Installing a Cache Chip**

## **2.4 JP12-DISPLAY ADAPTER SETUP**

Set the jumper, JP12, to configure the mainboard for either a color display card or a monochrome display card. Short the jumper for a color display adapter. Open the jumper for a monochrome display adapter. Refer to Fig 2 for the location of JP12. Set the jumper as below.

**JP12 -- Display Adapter Type**



Display Adapter	JP12
Color Display (Default)	 2 1
Mono Display	 3 1

Table 4

## 2.5 JP2-DISCHARGE CMOS SETUP

The CMOS Setup can be erased by shorting the jumper JP2 as below. Refer to Fig 2 for the location of JP2.

### JP2 -- Discharge CMOS Setup

 

CMOS Setup	JP2
Normal Operation (Default)	
Discharge CMOS	


 
Table 5

## 2.6 JP10-SOURCE OF GA20

The source of GA20 can be selected by JP10, when emulation fast gate A20 is selected, the system performance may optimize under Multi-user operation system. Refer to Fig 2 for the location of JP10. Set the jumper as below.

### JP10 -- Select Source of GA20



Source of CA20	JP10
Hardware Emulate KBGA20 (Default)	
Keyboard Controller 8042	

**Table 6**

## 2.7 MEMORY INSTALLATION

The GMB-486UN lets user add system memory via SIMM sockets on the mainboard. On-board memory is located in two banks: Bank 0 and Bank 1. See Fig 2.

Four SIMM sockets are provided in each bank. User can install either a 256K, 1M, or 4M SIMM in each socket. Note that all SIMM modules in a bank must be the same capacity.

SIMM speed required for best performance depends on the CPU speed, which requires 70ns SIMM.

The mainboard supports the following configurations:

Bank 0	Bank 1	Memory Size
256K	NONE	1MB
256K	256K	2MB
1M	NONE	4MB
256K	1M	5MB
1M	1M	8MB
4M	NONE	16MB
1M	4M	20MB
4M	1M	20MB
4M	4M	32MB


**Table 7: On-board Memory Configuration**

### 2.7.1 INSTALLING SIMM

Install a SIMM in a memory socket as follows:

*Caution: Static electricity can seriously damage SIMM modules.*

1. Review the section on static electricity precautions at the beginning of this manual.
2. Align the SIMM module so that the pin-1 marking on the module corresponds to the socket pin-1 marking.
3. Hold the module at a 70-degree angle to the socket, and insert the module's connectors into the socket.
4. Snap the module to a vertical position in the socket. The module is fully inserted when retaining pegs snap into holes at each end of the module.

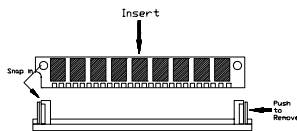

**Fig 5 Installing a SIMM**

5. To fill a bank, repeat steps 1 through 4 until the sockets in each bank contain SIMMs.
6. After installing memory, run BIOS Setup to indicate to the system for how much memory the user has installed.

---

## CHAPTER 3      MAINBOARD                                  INSTALLATION

Once the GMB-486UN mainboard's hardware has been configured, the user is now ready to install the mainboard into the system chassis. This chapter describes what are needed to assemble an advanced computer system based on the GMB-486UN mainboard.

### 3.1 COMPONENTS

The following components are recommended:

- Case with standard chassis and hardware. The GMB-486UN fits most AT compatible cases.
- Standard AT power supply
- 8 ohm speaker
- Floppy disk drive(s) (360KB, 1.2MB, or 1.44MB)
- Hard disk drive (optional)
- Hard disk and floppy disk drive controller card
- Flat ribbon cables to connect disk drive controller and disk drive(s)
- Serial/parallel interface card.
- AT-compatible keyboard.
- Video card and Display (monochrome, CGA, EGA, or VGA).

## 3.2 INSTALLING THE MAINBOARD

Before starting, check the location of the mounting holes in the case and on the mainboard.

*Caution: Static electricity can damage the mainboard.*

Install the GMB-486UN mainboard as follows:

1. Review the section on static electricity precautions at the beginning of this manual.
2. Place the case on an anti-static mat and remove the cover. Remove the nylon stand-offs and screws for mounting the mainboard.
3. Put the front of the case to the right and the rear to the left. The mainboard occupies the section of the case nearest the user; the power supply goes on the far side.
4. Align the mounting holes on the case to the mounting holes on the mainboard. Make sure to access the keyboard connector (J1) once the board is installed.
5. From the bottom of the mainboard, insert stand-offs into the proper holes on the board, and attach the mounting screws to the bottom of the case.

*Note: Some cases do not use stand-offs and mounting screws; in this case user can fasten the mainboard into the case with regular screws.*

6. Place the mainboard into the case and fasten the board securely with regular screws.

## 3.3 CONNECTION THE MAINBOARD

Once the mainboard have been fastened into the system case, the next step is to connect the internal cables. The internal cables are wire leads with plastic female connectors that attach to the connectors. The mainboard connectors have varying numbers of pins and are the points of contact between the mainboard and other parts of the computer.

A description of each connector and its connector pins follows. See Fig 6 for the location of the connectors on the mainboard.

*Note: Before making connectors on the board, make sure that power to the system is turned off.*

### 3.4 CONNECTION LOCATIONS

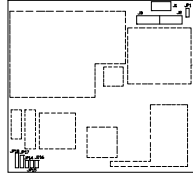


Fig 6 Connector Locations

### 3.5 CONNECTORS

#### 3.5.1 J2/J3-POWER SUPPLY CONNECTOR

The power supply connector has two six-pin male header connectors. Plug the dual connectors from the power directly onto the board connector.

J2		J3	
Pin	Description	Pin	Description
1	Power Good	1	Ground
2	+5V DC	2	Ground
3	+12V DC	3	-5V DC
4	-12V DC	4	+5V DC
5	Ground	5	+5V DC
6	Ground	6	+5V DC

Table 8

### 3.5.2 JP18-KEYLOCK & POWER LED CONNECTOR

JP18 is a keylock connector that enables and disables the keyboard and the Power-LED on the case.

Pin	Description
1	LED power
2	Not Used
3	Ground
4	Keyboard Inhibiter
5	Ground

**Table 9**

### 3.5.3 JP15-TURBO SWITCH CONNECTOR

JP15 connects to Turbo switch, which is used to select the mainboard's clock speed.

Setting	Description
Open	Normal Mode
Short (default)	Turbo Mode

**Table 10**

### 3.5.4 JP16-TURBO LED CONNECTOR

JP16 is usually connected to a Turbo LED on front of the system case. If the system board select is in Turbo mode, the indicator lights during high-speed operation.

Pin	Description
1	+Anode
2	-Cathode

**Table 11**



### 3.5.5 JP17-SPEAKER CONNECTOR

Attach the system speaker to connector JP17.

Pin	Description
1	Data Out
2	Not Used
3	Ground
4	+5V

**Table 12**

### 3.5.6 JP14-RESET SWITCH CONNECTOR

Attach the Reset switch cable to this connector. The Reset switch restarts the system.

Setting	Description
Short	Reset
Open	Not Reset

**Table 13**

### 3.5.7 JP1-EXTERNAL BATTERY

The GMB-486UN mainboard has a battery on-board; however, user can also attach an external battery to connector JP1. Using an external battery helps to conserve the on-board battery.

Pin	Description
1	VDD (6V)
2	Not Used
3	Ground
4	Ground

**Table 14**

### 3.5.8 J1-KEYBOARD CONNECTOR

A standard five-pin female DIM keyboard connector is located at the rear of the keyboard. Plug the jack on the keyboard cable into this connector.

Pin	Description
1	Keyboard Clock
2	Keyboard Data
3	Spare
4	Ground
5	+5V DC

Table 15

## 3.6 SYSTEM ASSEMBLY OVERVIEW

After installing and connecting the mainboard, assemble components in the following order:

1. **Power Supply:** Place the power supply so that it fits the raised tongues on chassis floor. Insert and fasten 2 screws on the back panel of chassis. Connect power supply to connector, J2/J3.
2. **Disk Drives:** Slide disk drives into the chassis. Connect a wide 34-wire ribbon cable to each disk drive which will attach to an adapter card. Connect the 4 power supply cables to disk drives.
3. **Adapter Cards:** Insert each adapter card -- Disk Controller cards, Video card, Serial/Parallel Interface card, etc, into an expansion slot. Refer to the installation and configuration instructions that come with the card. Connect the disk drives to the Floppy Disk and Hard Disk Controller cards.
4. **Keyboard:** Connect the keyboard to its connector, J1.
5. **Display:** Connect the display cable to the Video Card, and the display's power cord into a power outlet.
6. **Case:** Slide on the case cover and fasten its screws.

Connect the power cord to the power supply and plug it into a wall outlet. Put the boot disk into drive A: and turn on the power. User will then need to run the BIOS setup program.

---

## CHAPTER 4      AMI BIOS SETUP

The setup program provided with the mainboard is the AMI BIOS from American Megatrends Inc. Enter the AMI Setup program's Main Menu as follows:

1. Turn on or reboot the system. After a series of diagnostic checks, the following message appears:  
"Hit <DEL> if you want to run SETUP"
2. Press the <DEL> key to enter the AMI BIOS setup program and the following screen appears:  

```
STANDARD CMOS SETUP
ADVANCED CMOS SETUP
ADVANCED CHIPSET SETUP
AUTO CONFIGURATION WITH BIOS DEFAULTS
AUTO CONFIGURATION WITH POWER-ON DEFAULTS
CHANGE PASSWORD
HARD DISK UTILITY
WRITE TO CMOS AND EXIT
DO NOT WRITE TO CMOS AND EXIT
```
3. Choose an option and press <Enter>. Modify the system parameters to reflect the options installed in the system. (See the following sections for more information).
4. Press <ESC> at anytime to return to the Main Menu.
5. In the Main Menu, choose "WRITE TO CMOS AND EXIT" to save changes and reboot the system. Choosing "DO NOT WRITE TO CMOS AND EXIT" ignores all changes and exists the program.

### 4.1 STANDARD CMOS SETUP

Run the Standard CMOS Setup as follows.

1. Choose "STANDARD CMOS SETUP" from the Main Menu and a screen with a list of items appears.

<b>BIOS SETUP PROGRAM - STANDARD CMOS SETUP</b> (C)1990 American Megatrends Inc., All Rights Reserved																																																							
Date (mn/date/year): Thu, <b>Jan</b> 31 1991		Base memory : 640 KB																																																					
Time (hour/min/sec): 15 : 23 : 15		Ext. memory : 3072 KB																																																					
Daylight saving : Disabled		Cyln Head Wpcom LZone Sect Size																																																					
Hard disk C: type : Not Installed																																																							
Hard disk D: type : Not Installed		<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Sun</th> <th>Mon</th> <th>Tue</th> <th>Wed</th> <th>Thu</th> <th>Fri</th> <th>Sat</th> </tr> </thead> <tbody> <tr> <td>30</td> <td>31</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> </tr> <tr> <td>6</td> <td>7</td> <td>8</td> <td>9</td> <td>10</td> <td>11</td> <td>12</td> </tr> <tr> <td>13</td> <td>14</td> <td>15</td> <td>16</td> <td>17</td> <td>18</td> <td>19</td> </tr> <tr> <td>20</td> <td>21</td> <td>22</td> <td>23</td> <td>24</td> <td>25</td> <td>26</td> </tr> <tr> <td>27</td> <td>28</td> <td>29</td> <td>30</td> <td>31</td> <td>1</td> <td>2</td> </tr> <tr> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> <td>8</td> <td>9</td> </tr> </tbody> </table>					Sun	Mon	Tue	Wed	Thu	Fri	Sat	30	31	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	1	2	3	4	5	6	7	8	9
Sun	Mon						Tue	Wed	Thu	Fri	Sat																																												
30	31	1	2	3	4	5																																																	
6	7	8	9	10	11	12																																																	
13	14	15	16	17	18	19																																																	
20	21	22	23	24	25	26																																																	
27	28	29	30	31	1	2																																																	
3	4	5	6	7	8	9																																																	
Floppy drive A : Not Installed																																																							
Floppy drive B : Not Installed																																																							
Primary display : Not Installed																																																							
Keyboard : Not Installed																																																							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Month : Jan, Feb, ... Dec</td> </tr> <tr> <td style="padding: 2px;">Date : 01, 02, 03, ... 31</td> </tr> <tr> <td style="padding: 2px;">Year : 1981, 1982, ... 2099</td> </tr> </table>							Month : Jan, Feb, ... Dec	Date : 01, 02, 03, ... 31	Year : 1981, 1982, ... 2099																																														
Month : Jan, Feb, ... Dec																																																							
Date : 01, 02, 03, ... 31																																																							
Year : 1981, 1982, ... 2099																																																							
ESC:Exit ↓→↑←:Select F2/F3:Color PU/PD:Modify																																																							

**Fig 7 Standard CMOS Setup Screen**

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUp/PgDn keys. Some fields let user enter numeric values directly.
3. After user finished with the Standard CMOS Setup program, press the <ESC> key. The following appears:  
 "Write to CMOS and Exit (Y/N)?"
4. Typing "N" and <Enter> returns user to the Main Menu. Typing "Y" and <Enter> saves the system parameters and the system reboots.

## 4.2 ADVANCED CMOS SETUP

Run the Advanced CMOS Setup as follows.

1. Choose "ADVANCED CMOS SETUP" from the Main Menu and a screen with a list of items appears.

<b>BIOS SETUP PROGRAM - ADVANCED CMOS SETUP</b> (C)1990 American Megatrends Inc., All Rights Reserved	
Typematic Rate Programming : <b>Enabled</b>	Turbo Switch Function : <b>Enabled</b>
Typematic Rate Delay (msec) : <b>500</b>	Password Checking Option : <b>Setup</b>
Typematic Rate (Chars/Sec) : <b>15</b>	Video ROM Shadow C000, 16K : <b>Enabled</b>
Mouse Support Option : <b>Enabled</b>	Video ROM Shadow C400, 16K : <b>Enabled</b>
Above 1 MB Memory Test : <b>Disabled</b>	Adaptor ROM Shadow C800, 16K : <b>Enabled</b>
Memory Test Tick Sound : <b>Enabled</b>	Adaptor ROM Shadow CC00, 16K : <b>Enabled</b>
Memory Parity Error Check : <b>Enabled</b>	Adaptor ROM Shadow D000, 16K : <b>Disabled</b>
Hit <DEL> Message Display : <b>Enabled</b>	Adaptor ROM Shadow D400, 16K : <b>Disabled</b>
Hard Disk Type 47 RAM Area : <b>0:300</b>	Adaptor ROM Shadow D800, 16K : <b>Disabled</b>
Wait For <F1> If Any Error : <b>Enabled</b>	Adaptor ROM Shadow DC00, 16K : <b>Disabled</b>
System Boot Up Num Lock : <b>On</b>	Adaptor ROM Shadow E000, 16K : <b>Disabled</b>
Numeric Processor Test : <b>Enabled</b>	Adaptor ROM Shadow E000, 64K : <b>Disabled</b>
Weitek Processor : <b>Absent</b>	System ROM Shadow F000, 64K : <b>Enabled</b>
Floppy Drive Seek At Boot : <b>Enabled</b>	C000 Write Protect, 64K : <b>Enabled</b>
System Boot Up Sequence : <b>A:, C:</b>	D000 Write Protect, 64K : <b>Disabled</b>
System Boot Up CPU Speed : <b>High</b>	E000 Write Protect, 64K : <b>Disabled</b>
Cache Memory Select : <b>Both</b>	Boot Sector Virus Protection : <b>Disabled</b>
Fast A20 and fast reset : <b>Enabled</b>	
Fast KB Reset DELAY 2µs : <b>Enabled</b>	
Fast KB Reset Requires HALT : <b>Disabled</b>	
ESC:Exit ↓→↑←:Sel (Ctrl)Pu/Pd:Modify F1:Help F2/F3:Color F5:Old Values F6:BIOS Setup Defaults F7:Power-On Defaults	

**Fig 8 BIOS Setup Defaults**

2. Use the arrow keys to move between items and to select values. Modify the selected fields by using the PgUp/PgDn keys. An explanation of the <F> keys follows:
  - <F1>: "Help" gives options available for each item.
  - <F2/F3>: Change color.
  - <F5>: Get the old values. These values are the values with which the user started the current session. If the CMOS was good, then the old values are either the CMOS values or the BIOS Setup default values.
  - <F6>: Load all options in the Advanced CMOS Setup / Advanced Chipset Setup with the BIOS Setup default values.
  - <F7>: Load all options in the Advanced CMOS Setup / Advanced Chipset Setup with the Power-On default values.
3. After user has finished with the Advanced CMOS Setup program, press the <ESC> key. the following appears:

"Write to CMOS and Exit (Y/N)?"
4. Typing "N" and <Enter> returns user to the Main Menu. typing "Y" and <Enter> saves the system parameters and the system reboots.

### 4.3 ADVANCED CHIPSET SETUP

The Advanced Chipset Setup option is used to change the values of the chipset registers. These registers control most of the system options in the computer.

*Note: Change these settings only if user is familiar with the Chipset.*

Run the Advanced Chipset Setup as follows:

1. Choose "ADVANCED CHIPSET SETUP" from the Main Menu and a screen with a list of items appears.

BIOS SETUP PROGRAM - ADVANCED CHIPSET SETUP (C)1990 American Megatrends Inc., All Rights Reserved			
Tag RAM Include Dirty	: Enabled	Cyrix Pin Enabled	: Barb
Hidden Refresh	: Enabled	Gate A20 Path	: Normal
Cache Scheme	: W-Back		
Video BIOS Cache	: Enabled		
DRAM Read/Write	: 0 WS		
RAS Precharge	: 2Selk		
SRAM Read	: 0 WS		
SRAM Burst	: Enabled		
SRAM Write	: 0 WS		
Master Cycle Swap	: Disabled		
IO Recovery Time	: 1ATCLK		
AT Wait State	: 0 WS		
AT BUS CLK	: SCLK/3		
Non-Cacheable Block-0 Size	: 0 KB		
Non-Cacheable Block-0 Base	: 0000000H		
Non-Cacheable Block-1 Size	: 0 KB		
Non-Cacheable Block-1 Base	: 0000000H		
Cyrix A20M Pin	: Disabled		
ESC:Exit ↓→↑←:Sel (Ctrl)Pu/Pd:Modify F1:Help F2/F3:Color			
F5:Old Values F6:BIOS Setup Defaults F7:Power-On Defaults			

**Fig 9A Default Advanced Chipset Setup Screen for GMB-486UN 25MHz  
(486SX-25/486DX-50)**

<b>BIOS SETUP PROGRAM - ADVANCED CHIPSET SETUP</b> (C)1990 American Megatrends Inc., All Rights Reserved			
Tag RAM Include Dirty	: <b>Enabled</b>	Cyrix Pin Enabled	: <b>Barb</b>
Hidden Refresh	: <b>Enabled</b>	Gate A20 Path	: <b>Normal</b>
Cache Scheme	: <b>W-Back</b>		
Video BIOS Cache	: <b>Enabled</b>		
DRAM Read/Write	: <b>1 WS</b>		
RAS Precharge	: <b>2Sclk</b>		
SRAM Read	: <b>0 WS</b>		
SRAM Burst	: <b>Enabled</b>		
SRAM Write	: <b>0 WS</b>		
Master Cycle Swap	: <b>Disabled</b>		
IO Recovery Time	: <b>1ATCLK</b>		
AT Wait State	: <b>0 WS</b>		
AT BUS CLK	: <b>SCLK/4</b>		
Non-Cacheable Block-0 Size	: <b>0 KB</b>		
Non-Cacheable Block-0 Base	: <b>0000000H</b>		
Non-Cacheable Block-1 Size	: <b>0 KB</b>		
Non-Cacheable Block-1 Base	: <b>0000000H</b>		
Cyrix A20M Pin	: <b>Disabled</b>		
ESC:Exit ↓→↑←:Sel (Ctrl)Pu/Pd:Modify F1:Help F2/F3:Color			
F5:Old Values F6:BIOS Setup Defaults F7:Power-On Defaults			

**Fig 9B Default Advanced Chipset Setup Screen for GMB-486UN 33MHz (486DX-33/486DX2-66)**



<b>BIOS SETUP PROGRAM - ADVANCED CHIPSET SETUP</b> (C)1990 American Megatrends Inc., All Rights Reserved			
Tag RAM Include Dirty	: <b>Enabled</b>	Cyrix Pin Enabled	: <b>Barb</b>
Hidden Refresh	: <b>Enabled</b>	Gate A20 Path	: <b>Normal</b>
Cache Scheme	: <b>W-Back</b>		
Video BIOS Cache	: <b>Enabled</b>		
DRAM Read/Write	: <b>2 WS</b>		
RAS Precharge	: <b>4Sclk</b>		
SRAM Read	: <b>1 WS</b>		
SRAM Burst	: <b>Enabled</b>		
SRAM Write	: <b>2 WS</b>		
Master Cycle Swap	: <b>Disabled</b>		
IO Recovery Time	: <b>1ATCLK</b>		
AT Wait State	: <b>0 WS</b>		
AT BUS CLK	: <b>SCLK/6</b>		
Non-Cacheable Block-0 Size	: <b>0 KB</b>		
Non-Cacheable Block-0 Base	: <b>0000000H</b>		
Non-Cacheable Block-1 Size	: <b>0 KB</b>		
Non-Cacheable Block-1 Base	: <b>0000000H</b>		
Cyrix A20M Pin	: <b>Disabled</b>		
<b>ESC:Exit ↓→↑←:Sel (Ctrl)Pu/Pd:Modify F1:Help F2/F3:Color</b>			
<b>F5:Old Values F6:BIOS Setup Defaults F7:Power-On Defaults</b>			

**Fig 9C Default Advanced Chipset Setup Screen for GMB-486UN 50MHz (486DX-50)**

2. Use the arrow keys to move between items select values. Modify selected fields using the PgUp/PgDn keys. An explanation of the <F> keys are shown on pg22 of this manual.
3. After finishing with the Advance Chipset Setup, press the <ESC> key. The following appears:  
"Write to CMOS and Exit (Y/N)?"
4. Typing "N" and <Enter> returns user to the Main Menu. Typing "Y" and <Enter> saves the system parameters and the system reboots.

#### **4.4 AUTO CONFIGURATION WITH BIOS DEFAULTS**

This Main Menu item loads the default system values. If the CMOS is corrupted the defaults will load automatically. Choose this item and the following message appears:

"Load BIOS Setup Default Values from ROM Table (Y/N)? N"

To use the BIOS defaults, change the prompt to "Y" and press <Enter>. The following message appears:

"Default values loaded. Press any key to continue."

#### **4.5 AUTO CONFIGURATION WITH POWER-ON DEFAULTS**

This Main Menu item uses the default Power-On values. Use this option as a diagnostic aid if the system behaves erratically. Choose this item and the following message appears:

"Load Power-On Default Values (Y/N)? N"

To use the Power-On defaults, change the prompt to "Y" and press <Enter>. The following message appears:

"Default values loaded. Press any key to continue."

## 4.6 CHANGE PASSWORD

The Main Menu item lets user to configure the system so that a password is required every time the system boots or an attempt is made to enter the Setup program.

The password cannot be longer than 6 ASCII characters. A default password is stored in the ROM in case the CMOS is corrupted. The default password is <AMI>. To change the password choose "Change Password" in the Main Menu and press <Enter>.

When user next boot the system, after saving changed value to CMOS, user will be prompted for the password.

If user is not prompted for the password, check that the "Password Checking Option" in the Advanced CMOS Setup is configured for "Always" or "Setup". See the section above on "Advanced CMOS Setup."

When the password prompt appears, key in the new password and press <Enter>. If loose or disconnected batteries corrupt the CMOS, use the default password, <AMI> instead.

**Important:** Keep a safe record of the new password. If forget or lose the password, the only way to access the system is to disconnect the CMOS batteries and then re-use the default password <AMI>.

## 4.7 HARD DISK UTILITY

This Main Menu item gives user three options for analyzing and formatting a hard disk. The three options are:

- **Hard Disk Format** - performs a "low level" format of the hard disk. Check with the hard drive manufacturer to see if this option is required.

- **Auto Interleave** - determines optimum interleave factor before formatting the hard disk.
- **Media Analysis** - analyzes each track of the hard drive. Marks unusable tracks as "bad" to prevent future data storage on those tracks.

Error messages specific to the Hard Disk Utility options may appear during initialization or operation. Refer to Chapter 6 for a list of these messages.

**Warning:** *Performing any one of these options destroys all data on the hard disk. User must back-up the hard disk before performing any of these tests.*

- Notes:
1. *System documentation of brand new hard disk usually provides a list of "bad tracks" as well as the optimum interleave factor.*
  2. *These options are not valid for a SCSI Disk Drive.*

---

## CHAPTER 5 HARD DISK TYPES

The AMI BIOS supports the following hard disk types.

Type	Cyln	Head	WPrec	LZone	Sect	Cap (MB)
1	306	4	128	305	17	10MB
2	615	4	300	615	17	20MB
3	615	6	300	615	17	31MB
4	940	8	512	940	17	62MB
5	940	6	512	940	17	47MB
6	615	4	65535	615	17	20MB
7	462	8	256	511	17	31MB
8	733	5	65535	733	17	30MB
9	900	15	65535	901	17	112MB
10	820	3	65535	820	17	20MB
11	855	5	65535	855	17	35MB
12	855	7	65535	855	17	50MB
13	306	8	128	319	17	20MB
14	733	7	65535	733	17	43MB
15	0	0	0	0	0	0MB
16	612	4	0	663	17	20MB
17	977	5	300	977	17	41MB
18	977	7	65535	977	17	57MB
19	1024	7	512	1023	17	60MB
20	733	5	300	732	17	30MB
21	733	7	300	732	17	43MB
22	733	5	300	733	17	30MB
23	306	4	0	336	17	10MB
24	925	7	0	925	17	54MB
25	925	9	65335	925	17	69MB

(TO BE CONTINUED)

Type	Cyln	Head	WPrec	LZone	Sect	Cap (MB)
26	754	7	754	754	17	44MB
27	754	11	65535	754	17	69MB
28	699	7	256	699	17	41MB
29	823	10	65535	823	17	68MB
30	918	7	918	918	17	53MB
31	1024	11	65535	1024	17	94MB
32	1024	15	65535	1024	17	128MB
33	1024	5	1024	1024	17	43MB
34	612	2	128	612	17	10MB
35	1024	9	65535	1024	17	77MB
36	1024	8	512	1024	17	68MB
37	615	8	128	615	17	41MB
38	987	3	987	987	17	25MB
39	987	7	987	987	17	57MB
40	820	6	820	820	17	41MB
41	977	5	977	977	17	41MB
42	981	5	981	981	17	41MB
43	830	7	512	830	17	48MB
44	830	10	65535	830	17	69MB
45	917	15	65535	918	17	114MB
46	1224	15	65535	1223	17	152MB
47	USER DEFINE TYPE					

**Table 16: Default Fixed Disk Table**

---

## CHAPTER 6 ERROR CODES

Every time when power on the system, the POST (Power On Self Test) diagnostic routines will check to make sure the system is running properly. During boot-up, the POST communicate errors to the user as either a series of beeps, or as messages on the display screen. Fatal errors do not let the system complete boot-up, and are usually signalled as a series of beeps, since the display may not come on. Non-fatal errors allow boot-up to continue, and error messages appear on the screen.

### 6.1 BEEP ERROR CODES

These codes are emitted as a series of audible beeps. All Beep Error Codes, except for number 8, are fatal errors. If the system does not boot-up and starts beeping, write down the number of beeps that had heard and consult an authorized repair person.

Beep Error Codes and their meanings follow:

<b>Number of Beeps</b>	<b>Error Message</b>
1	Refresh Failure
2	Parity Error
3	Base 64 KB Memory Failure
4	Timer Not Operational
5	Processor Error
6	8042 - Gate A20 Failure
7	Processor Exception Interrupt Error
8	Display Memory Read/Write Error
9	ROM Checksum Error
10	CMOS Shutdown Register Read/Write Error

**Table 17**

## 6.2 ERROR MESSAGES

Non-fatal Error Messages usually appear on the screen as follows:

ERROR Message Line 1

ERROR Message Line 2

Press <F1> to RESUME

After user note the Error Message, then press the <F1> key to allow the system to proceed with boot-up. A list of Error Messages follows:

<b>Message</b>	<b>Action</b>
<b>CMOS Battery State Low</b>	Replace the battery.
<b>CMOS Checksum Failure</b>	Run the BIOS SETUP program.
<b>CMOS System Options Not Set</b>	Run the BIOS SETUP program.
<b>CMOS Display Type Mismatch</b>	Run the BIOS SETUP program.
<b>Display Switch Not Proper</b>	Properly set the video switch on the mainboard to monochrome or color.
<b>Keyboard Is Locked...Unlock It</b>	Unlock the keyboard lock to continue boot-up.
<b>Keyboard Error</b>	Make sure to have the AMI keyboard BIOS installed, or set the Standard CMOS Setup's "Keyboard" option to "Not Installed".
<b>CMOS Memory Size Mismatch</b>	Run the BIOS SETUP program.
<b>FDD Controller Failure</b>	Check all connections after the system is powered off.
<b>HDD Controller Failure</b>	Check all connections after the system is powered off.
<b>C: Drive Error</b>	Check Standard CMOS Setup to see if correct hard disk is selected.
<b>D: Drive Error</b>	Check Standard CMOS Setup to see if correct hard disk is selected.
<b>CMOS Time &amp; Date Not Set</b>	Check Standard CMOS Setup to see if correct date and time are selected.
<b>Diskette Boot Failure</b>	Use another boot disk.
<b>Invalid Boot Diskette</b>	Use another boot disk.



<b>Message</b>	<b>Action</b>
<b>On Board Parity Error</b>	Use memory diagnostic software, such as AMIDIAG, to find and correct memory problems.
<b>Off Board Parity Error</b>	Use memory diagnostic software, such as AMIDIAG, to find and correct memory problems.
<b>Parity Error ????</b>	Use memory diagnostic software, such as AMIDIAG, to find and correct memory problems.

**Table 18**

Note: For any other error messages please consult an authorised repair person.

### 6.3 HARD DISK UTILITY ERROR MESSAGES

The following error messages may appear during the Hard Disk Utility routines of the BIOS Setup program. The first four messages may appear during initialization; the rest may appear during operations.

<b>Message</b>	<b>Action</b>
<b>No Hard Disk Installed</b>	Check if hard disk is on the system.
<b>Fatal Error Bad Hard Disk</b>	Check all cables and power connections.
<b>Hard Disk Controller Failure</b>	Check that the controller is properly inserted in the BUS slot.
<b>C: (D:) Hard Disk Failure</b>	Check all cables and power connections.
<b>Drive Parameter Activity Failed</b>	Check to see if the proper drive type is selected in the Standard CMOS Setup.

**Table 19**

Note: For any other error messages please consult an authorised repair person.