

STEP 1 to Enter Program Mode:

Type: *3001#12345<STO>00 Phone Responds: STORE NOT DONE

STEP 2 to Program the User's Phone Number:

Press: <RCL> 0 2 Phone Responds: 1111111111
(or previously programmed #)

Press and HOLD: <CLR> until display is empty

Type: cellular phone number and <STO> 02 Phone Responds:
REPLACE CONTENTS? For example: 8173905555 <STO> 02

Press: <STO> Phone Responds: STORED


STEP 3 to Enter Carrier Parameters:

Type: <RCL> 0 3 Phone Responds: 38*1*1*334*15*15
(or previously programmed parameters)

Press and HOLD: <CLR> until display is empty

Type: cellular phone paramemters and <STO> 03

For example: 00038*1*1*334*05*10 <STO> 03

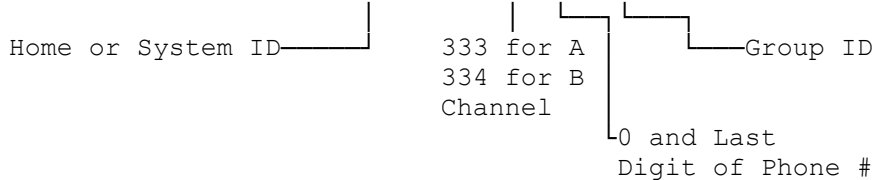

Phone Responds: REPLACE CONTENTS?

Press: <STO>

STEP 4 to Enter Security Code Parameters

Type: <RCL>01 Phone May Respond: 911#*911#0*12345

Press and HOLD: <CLR> until display is empty

Type: 911#*911#0*

Type: 5 digit security code (12345 is the default)

Type: <STO>01 Phone Responds: REPLACE CONTENTS?

Press: <STO>

You are DONE. The phone must be turned off and then on again before it will recognize the new parameters. Always wait at least two hours after receiving the cellular phone number from the carrier before testing the phone.