


FUNCTION SELECTION --DIP SWITCH SETTINGS

There are 8 switches inside of the Printer. These Switches allow you to customize some of the DMP-2100 features for your own applications.

For instance, by setting the appropriate Switches before turning the DMP-2100's power ON, you can select Word Processing Mode or Data Processing Mode.

When you receive the DMP-2100, all Switches should be set to OFF.

REMEMBER! The Printer power must be OFF before you change any of the Switches. On power-up, these become the default settings.

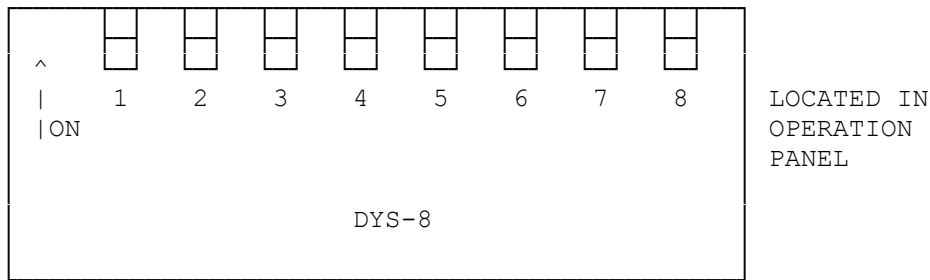

FUNCTION SELECTION SWITCH

|     | OFF                            |     |     | ON                             |
|-----|--------------------------------|-----|-----|--------------------------------|
| 8   |                                |     |     |                                |
| 7   | ASCII CHARACTER                |     |     | TANDY CHARACTER                |
| 6   | Carriage Return with Line Feed |     |     | Carriage Return Only           |
| 5   | Line Feed Only                 |     |     | Line Feed with Carriage Return |
| 4   | DP MODE                        |     |     | WP MODE                        |
| L → | 3                              | 2   | 1   | CHARACTER                      |
|     | OFF                            | OFF | OFF | STANDARD-10                    |
|     | OFF                            | OFF | ON  | STANDARD-12                    |
|     | OFF                            | ON  | OFF | CONDENSED-16.7                 |
|     | OFF                            | ON  | ON  | STANDARD-10                    |
|     | ON                             | OFF | OFF | CORRESPONDENCE-10              |
|     | ON                             | OFF | ON  | CORRESPONDENCE-12              |

|  |    |    |     |              |
|--|----|----|-----|--------------|
|  | ON | ON | OFF | STANDARD-10  |
|  | ON | ON | ON  | PROPORTIONAL |

(smm 07/26/93)